

Exhibit 5

Table 1


Material Analyzed: Peek Tubing

DSC SCANNING RATE : 20°C/Minute

MATERIAL ANALYZED	Run Number	Wt mg	Tg °C	EXOTHERM CRYST.		MELTING PEAK	
				Tc °C	ΔHc J/G(-)	Tm °C	ΔH J/G
Peek Tubing Sample	1	5.23	144.7	170.6	19.0	333.4	37.8
	2	5.45	146.4	171.0	18.8	334.4	36.5
	3	5.34	144.9	170.6	18.7	336.8	37.5
Average			145.3	170.7	18.8	334.9	37.3

L.S. Mariano/1-21-94

Curve 1: DSC
 File info: PEEK3 Thu Jan 20 14:36:02 1994
 Sample Weight: 5.340 mg
 PEEK TUBING

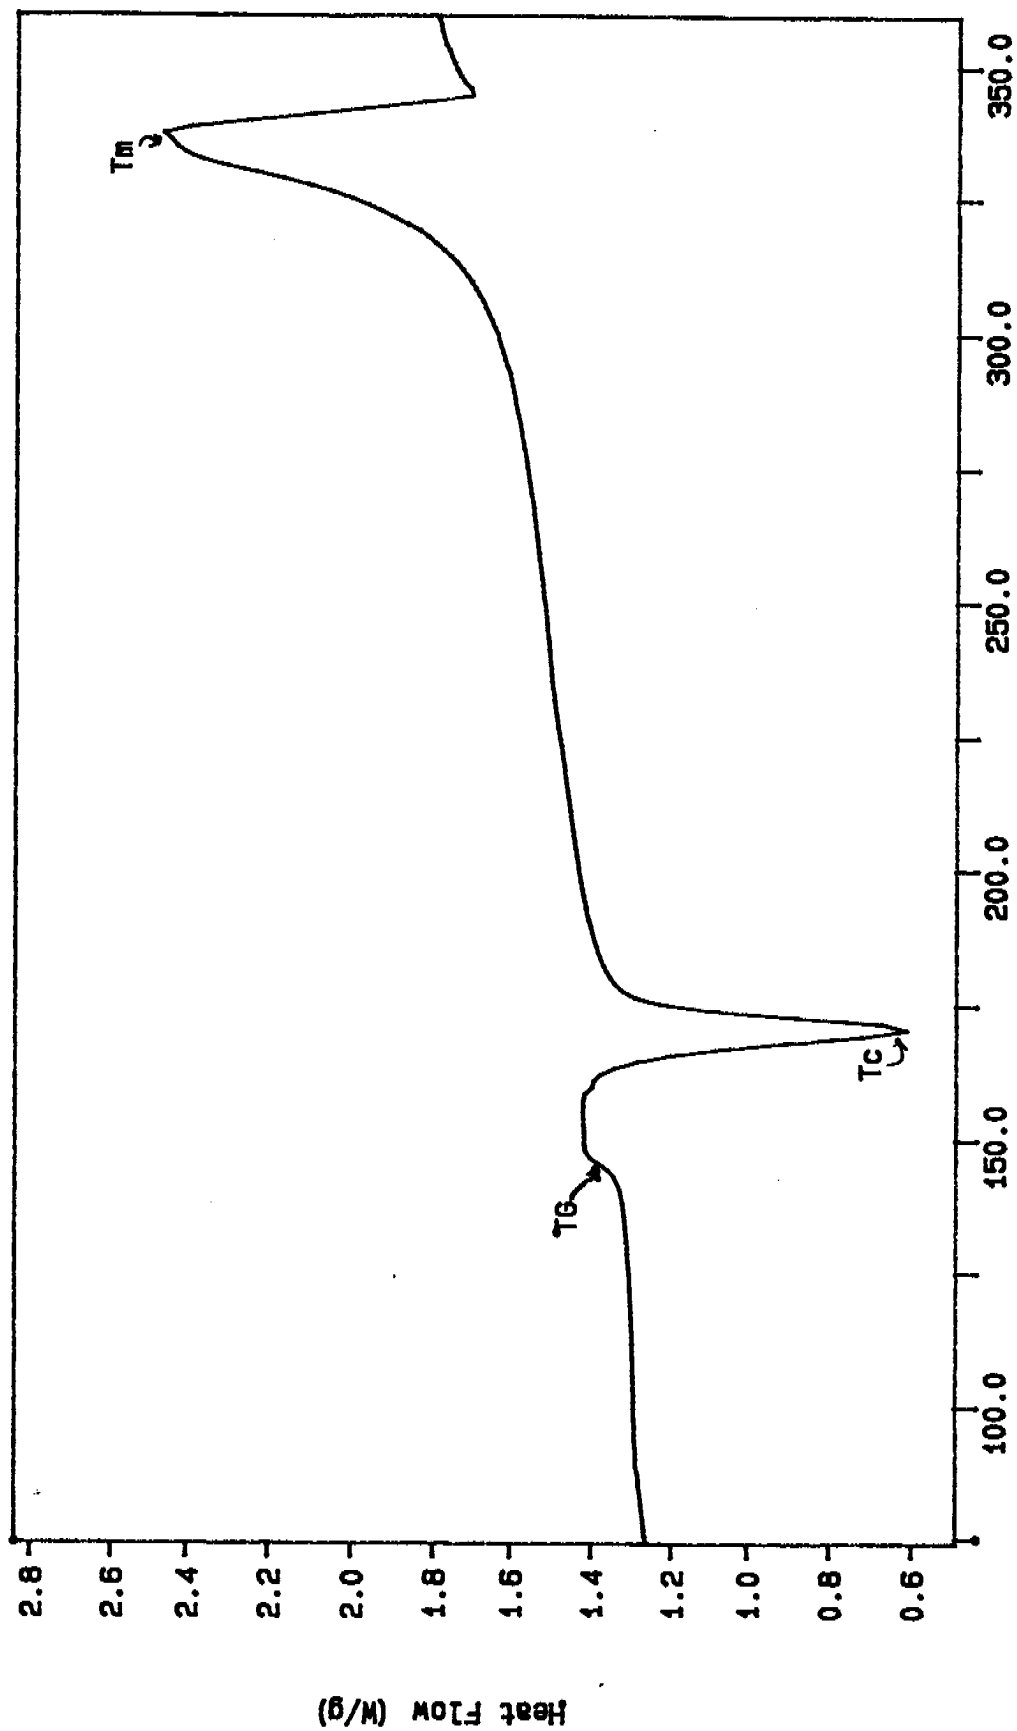

SC940120
 TAP# 58.0 S TIME# 16.8 min RATE# 20.0 C/min
 Lucy Mariano
 PERKIN-ELMER
 7 Series Thermal Analysis System
 Tue Jan 25 10:21:52 1994